IR remote control User Manual

© e:cue control GmbH
An OSRAM Company
Rev. 1_08/2009
www.ecue.de

1. Introduction

e:cue IR remote control
(Art. No. 160079)

The e:cue IR remote control is a dedicated remote controller for the following e:cue devices:

- light-drive elite
- glass touch series
- e:node512 desktop and wallmount
- red/silver butler
- butler xt

2. Included in the package

1x e:cue IR remote control
Art. No. 160079

2x AAA Battery

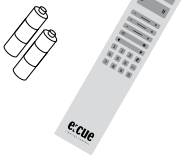

Batteries must be disposed properly.

3. Technical Data

Active dictance	Up to 7m / 23 ft
Power	2x AAA size battery
Dimensions	197,4 x 42,3 x 23 mm 7.77" x 1.67" x 0.91"
Weight	148g / 0.33 lbs (excluding battery)
Certifications	CE FC

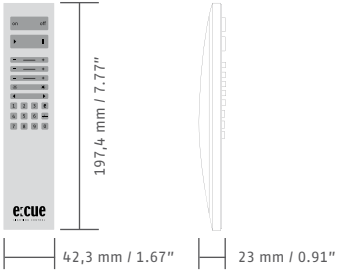

4. Using the IR Remote

Insert the two AAA batteries into the remote control and press button for connecting to an e:cue device.

Now you can start to operate the e:cue devices by selecting the different functions offered by the remote control as described.

Depending on the e:cue device you can freely configure the buttons of the remote control.

For further information about configuring the IR remote control for a specific e:cue device please refer to the setup manual of the respective e:cue device.

5. Care and Maintenance

- For indoor use only
- Keep products in a dry and precipitation free area
- Keep products in a dirt and dust free environment
- Make sure the products are not exposed to extreme heat and that they have sufficient airflow and cool air circulation if required
- Do not attempt to service or repair the products unless done by an authorized service personnel.
- Do not drop, knock or shake the products as rough handling may damage the electronics and void the warranty.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean. Wipe with a damp cloth on housings and a dry cloth on electronics to remove dirt or dust.

6. Warranty Statement

e:cue warrants its products against material or workmanship defects for a period of two years from date of purchase, provided that the purchased items are used under the conditions stated in this user manual.

For your own safety and that of the product, please read this user manual carefully before beginning setup and installation.